Motion

AIRSCAPE

Parts List

Contents

Front
Page 3

Rear
Page 4

Seat
Page 5

Batteries
Page 8

Front Parts	Part Number
1 Tiller Shroud (Top)	AS.102
2 Tiller Shroud (Bottom)	AS.103
3 Front Shroud	AS.104
4 Front Wheel	AS.105
5 Hub Cap	AS.106
6 Front Chassis	AS.113
7 Tiller Adjustment Assembly	LL.107
8 Basket	LL.110
9 Speed Knob	LL.121
10 Wig Wag	LL.122
11 Key Barrel	LL.123
12 Key	LL.126
13 Voltmeter	LL.127
14 Throttle Pot	LL.128
15 Speed Pot	LL.129
16 Horn Button	LL.130
17 Main Wiring Loom Mk1	LL.137
18 Horn	LL.139
19 Basket Bracket	LL.140
20 Tiller Adjustment Knob	LL.141

Front Parts	Part Number
21 Front Wheel Fixing Tube	LL.157
22 Tiller Bar Assembly	LL.165
23 Handle Grips	LL.166
24 Front Wheel (Soft Compound)	LL.168
25 Universal Delta Handlebar	LL.169
26 Controller	LL.185
27 Super Soft Wheel Set	LL.187

Rear Parts	Part Number
28 Rear Wheel	AS.107
29 Rear Chassis	AS.108
30 Rear Shroud	AS.109
31 Anti-Tip Wheel	LL.117
32 Electromagnetic Brake	LL.120
33 Rear Chassis Connector (Male)	LL.147
34 Rear Chassis Connector (Female)	LL.148
35 Motor	LL.160
36 Transaxle	LL.161
37 Rear Wheel (Soft Compound)	LL.167

Seat Parts		Part Number
38 Seat Cover (Back)		AS.110
39 Seat Cover (Base)		AS.111
40 Seat Assembly		AS.112
41 Left Armrest		LL.111
42 Right Armrest		LL.112
43 Seat Post		LL.115
44 Seat Post Pin		LL.116
45 Arm Pad		LL.143
46 Armrest Securing Knob (Set)		LL.144
47 Seat Post Securing Knob		LL.145
48 Seat Lever Knob	LL.152	£1.50

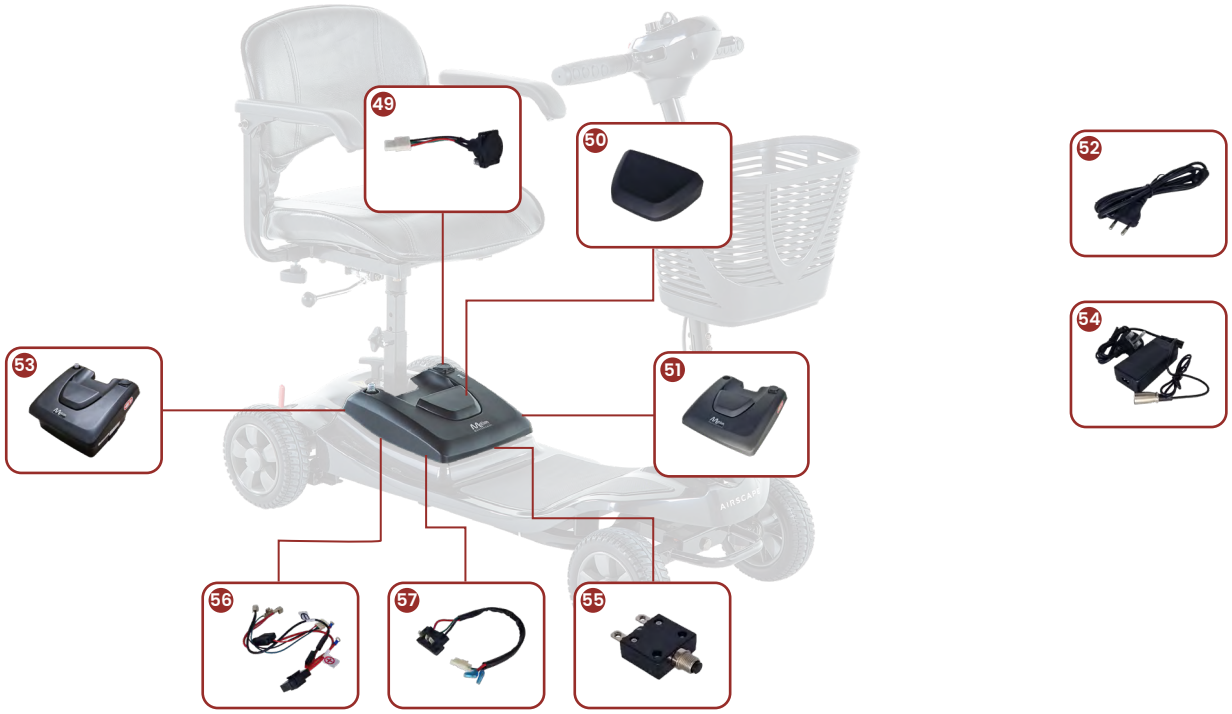

Battery Parts	Part Number
49 Battery Charging Port	AL.123
50 Battery Box Handle	AL.131
51 Battery Lid Set	AL.133
52 EU Power Cord (2ah)	CAB.001
53 10.75ah Battery Pack	LL.103
54 Battery Charger (2ah)	LL.104
55 Circuit Breaker	LL.119
56 Battery Connector (Female)	LL.149
57 Battery Connector (Male)	LL.151